Dana Stylus

User & Installation Manual



Thank you for purchasing this Roksan Corus2 stylus.

REPLACING THE STYLUS

- The stylus needs to be removed with the cartridge still attached to the tonearm. It is advisable, but not necessary to remove the platter to give more room when swapping stylus.
- 2. Remove the stylus housing by holding the cartridge body and stylus housing and pulling them apart vertically as shown below.



3. Ensure the stylus guard is in place on the new stylus housing align the stylus under the cartridge and press into place.



The lifetime of the stylus is approximately 800 - 1000hours.

- You may wish to recheck the alignment of the cartridge using a tonearm alignment protractor.
- 5. Confirm the tracking weight is 2g using a stylus balance gauge.
- 6. Raise the stylus guard prior to playing any records.

SAFETY PRECAUTIONS

- Keep the product away from small children to avoid accidents.
- Do not put the stylus in a location where it is exposed to direct sunlight, near heating devices, or in places with high temperatures, high humidity, or high concentrations of dust.
- Do not touch the stylus cantilever to avoid damage.
- · Do not subject the stylus to strong impact.

CARE

Use a stylus brush to remove dirt and dust from the stylus tip. Always move the brush in the direction in which the record rotates. Clean the record using a record cleaning brush before playing.

For more information visit roksan.com



Please visit roksan.com/videos/Corus2 or scan this QR code to view the installation video

CONTACT US

Roksan 24 Brook Road,

Rayleigh,

Essex,

SS6 7XJ, UK

+44 (0)1268 798900

info@roksan.com